HOME DECORATORS

collection®

GENEVIEVE STORGE W/ DRAWER

Assembly Instructions

HDC #:05719 MFG #:TF0048

Please read over the instructions; it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

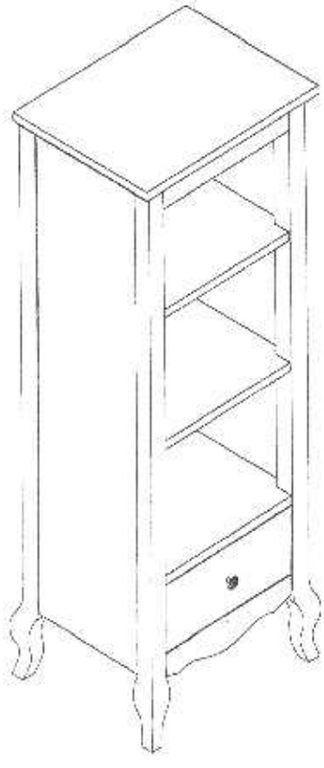

Parts Check List

Please remove all the parts carefully from the box. Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.

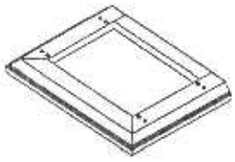

① Top Frame - 1

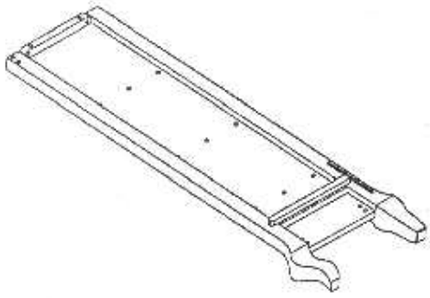

② Left Side Panel - 1

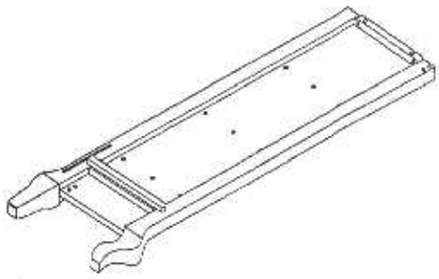

③ Right Side Panel - 1

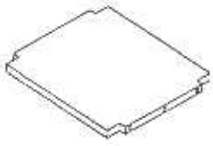

④ Upside Fixed Panel - 2

⑤ Underside Fixed Panel - 1

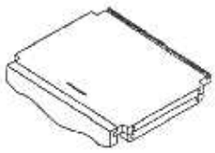

⑥ Bottom Panel - 1

⑦ Crossbar- 1



⑧ Drawer Face Panel - 1

⑨ Drawer Side Panel - 2

⑩ Drawer Back Panel - 1

⑪ Drawer Bottom Panel - 1

⑫ Back Panel - 1

Hardware Check List

Please take all the hardware listed below out of the hardware bag.

A

Cam-Bolt - 12

B

Cam-Lock - 12

C

Cover - 12

D

Glue - 1(25g)

E

Allen Wrench - 1

F

Allen Bolt - 8 (Ø1/4"×1-1/4"L)

G

Lock Washer - 8 (Ø1/4")

H

Flat Washer - 8 (Ø1/4"×16D)

I

Screw - 8 (#8×1")

J

Wood Dowel - 18
(Ø8×30mm)

K

Long Bolt - 1(Ø5/32"×1")

L

Hand Pull - 1

M

Plastic Ward - 1

O

Screw - 2 (#8×1-1/2")

N

Flat Head Screw - 1
(#6×14mm)

When inserting cam-bolts, the shoulder should be flush with the surface. If using an electric screwdriver, be careful not too over tighten the Cam-bolt, this can cause damage .

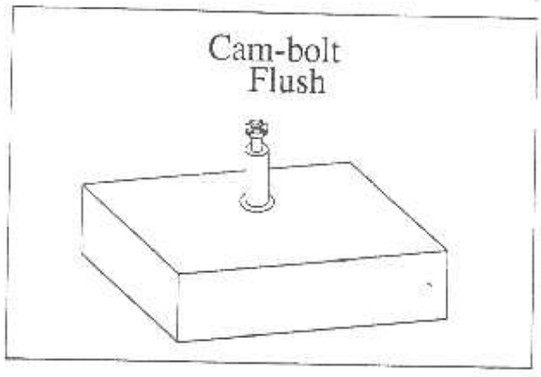

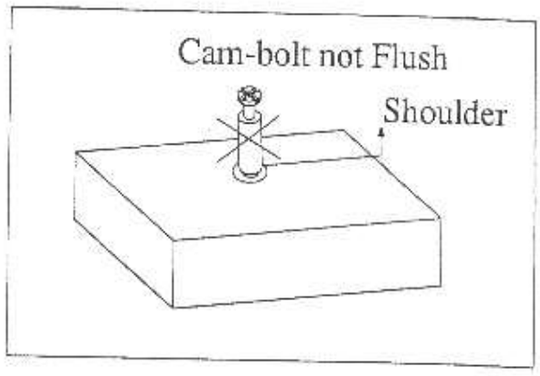

How to use Cam-Locks

Cam-locks should be inserted into their designated holes with the arrow pointing to the nearest edge. The coordinating Cam-bolt will be inserted into the Cam-lock. Using the allen wrench or a flat-head screwdriver, tighten the Cam-locks until you feel resistance. Over tightening the Cam-lock may break the cam-lock.

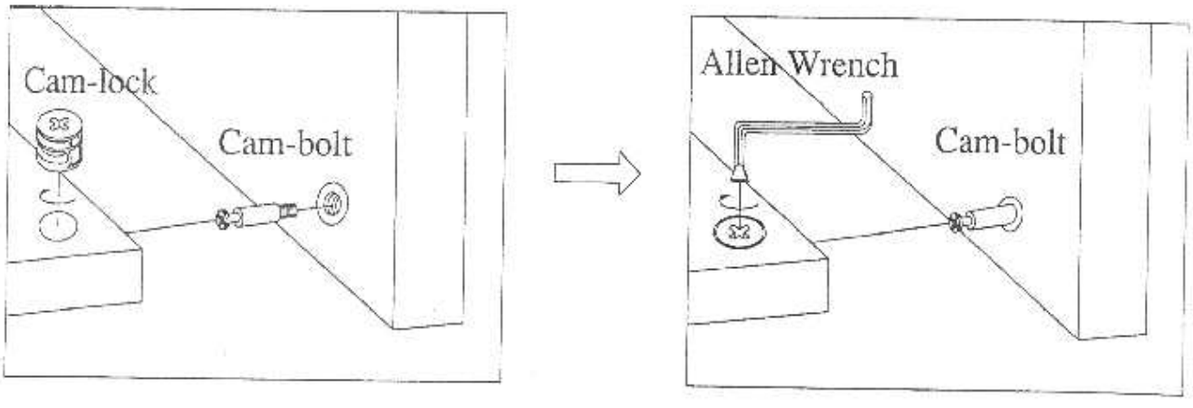

1. Fill the middle holes on both Side panel(2&3), Fixed Panel(4&5), Bottom Panel(6) and Crossbar(7) with Glue(D). Then insert Wood Dowels(J). Screw Cam-bolts(A) into the thread holes in Side Panel(2&3). Then attach Plastic Wards(M) to Bottom Panel(6) with Flat Head Screw(N) by screwdriver.

See figure below:

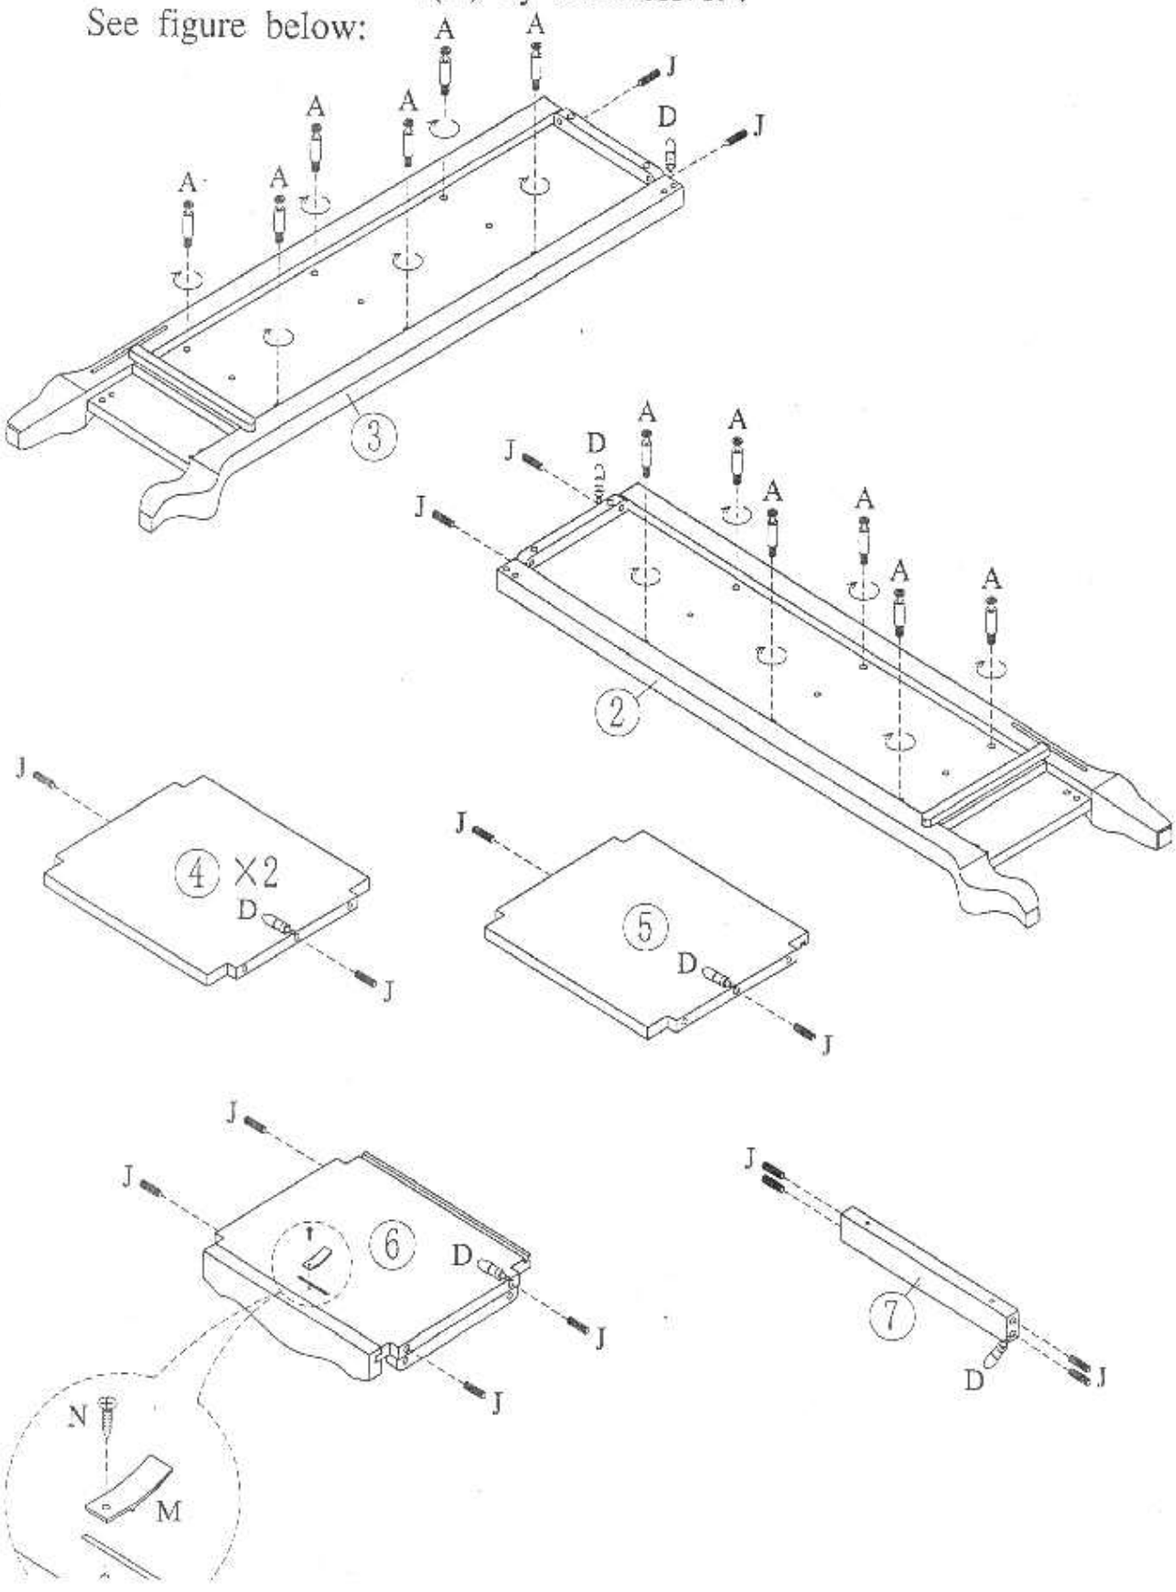

2. Attach Side Panel(2&3) to Fixed Panel(4&5), Back Panle(12), Crossbar(7) and Bottom Panel(6) with Allen Bolts(F) through Lock Washers(G), Flat Washers(H) and Cam-locks(B) by Allen Wrench(E). Cover all Cam-Locks(B) with Covers(C). See figure below:

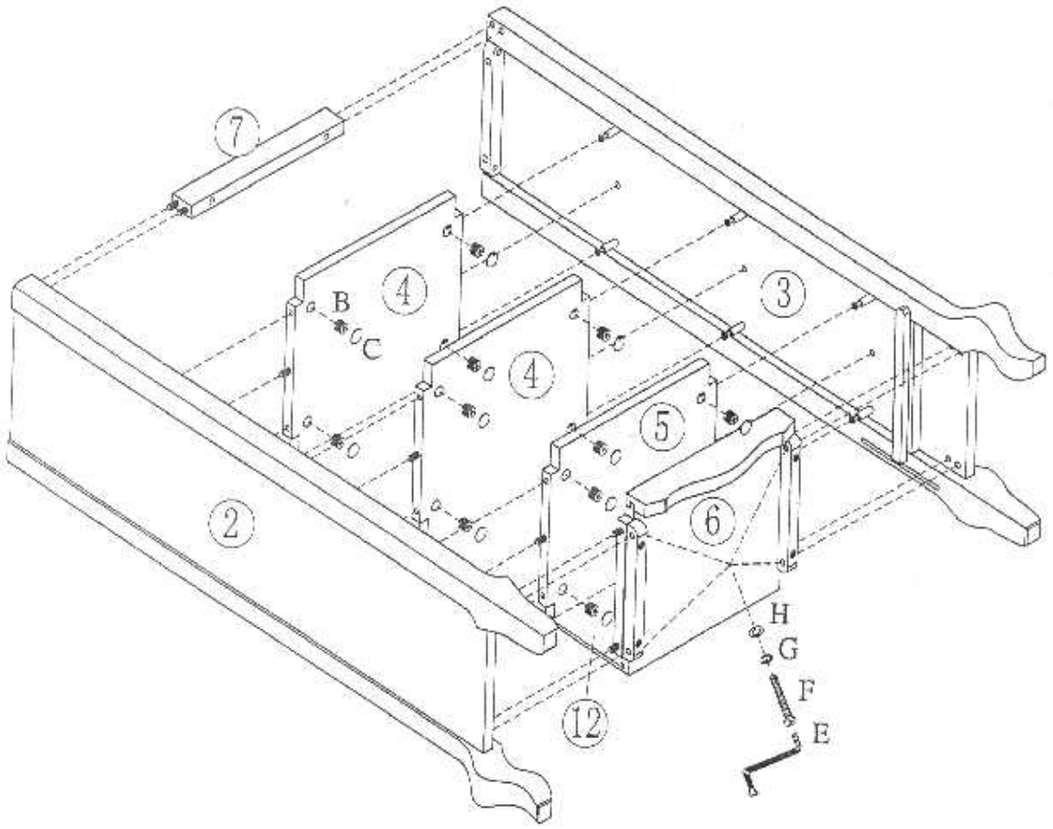

3. Attach Top Panel(1) to Side Panel(2&3) with Allen Bolts(F) through Lock Washers(G) and Flat Washers(H) by Allen Wrench(E) . Attach Crossbar(7) to Top Panel(1) with Screws(O). See figure below:

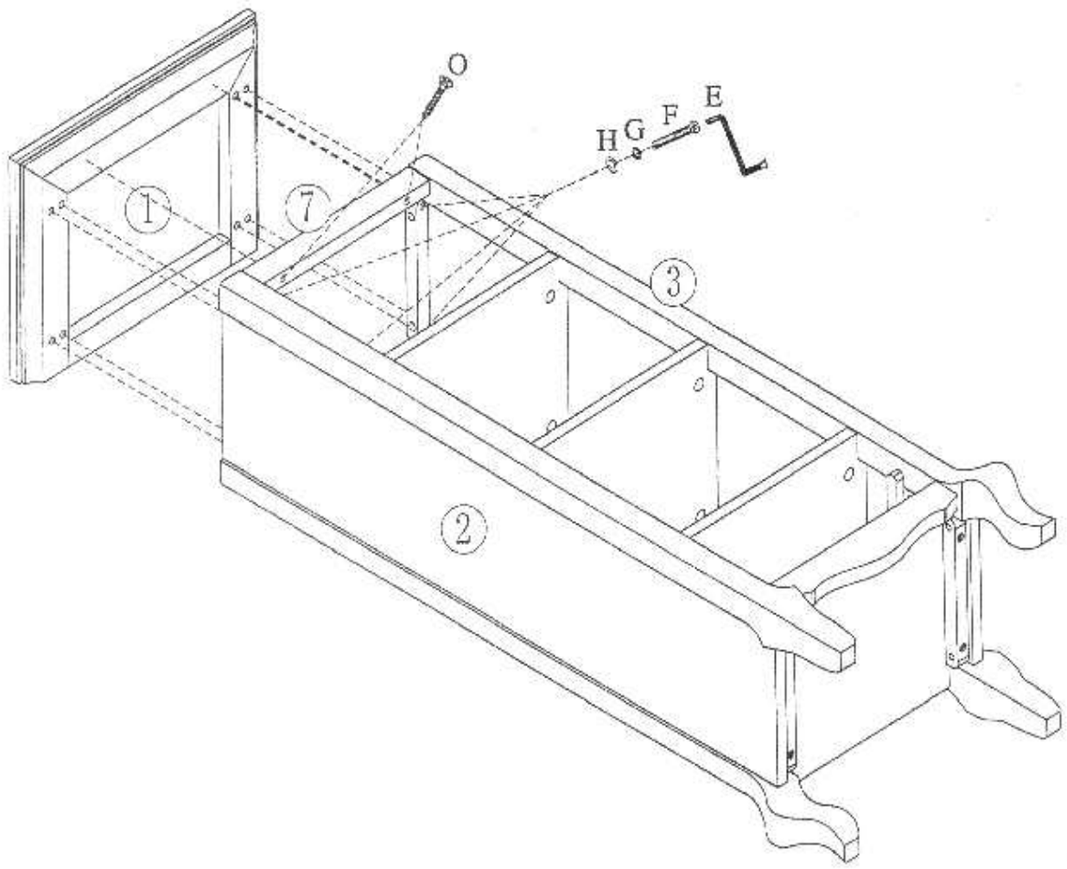

4. Attach the drawer as figure show.
   Then install the Hand Pull(L) to the drawer face with Blot(K) by screwdriver.

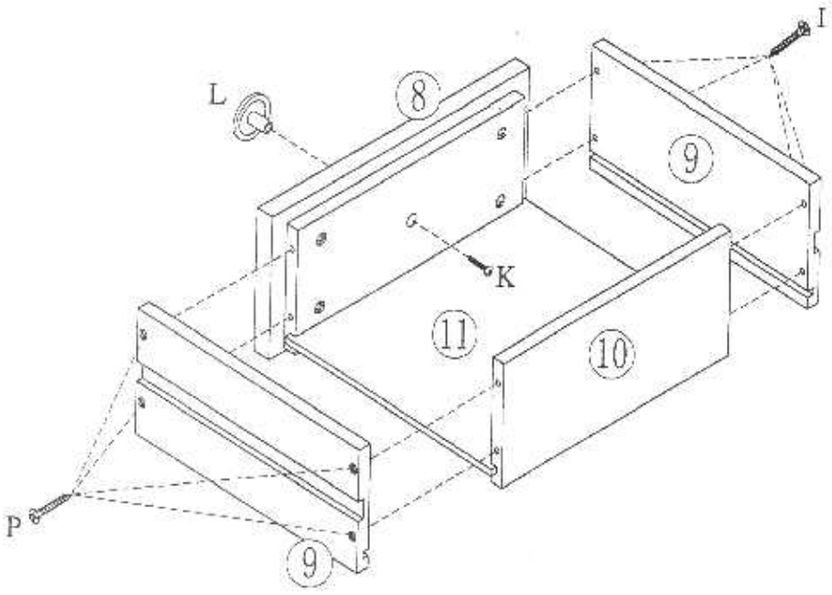

5. Place the drawer into the unit.

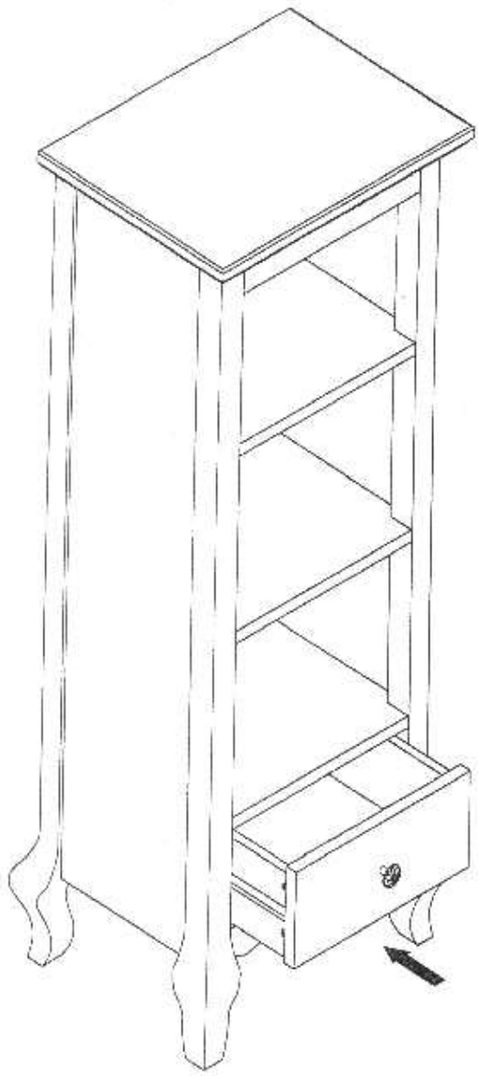

Assembly is now complete!